



V1.0 23/09/26

• TSUN Monitoring and Management Portal





TSUN Monitoring and Management Portal

Guidance

Distributor / Installer



- Tsun suggest distributor to create their own account.
- If Distributors create, manage and edit their own accounts, Tsun will not intervene in management.
- Please use the management email to create your organization account.
- Distributors can choose to let your installer create their own account or help installer create an account

If Distributor Create Installer account : (Account Belong To Distributor)	if Installer Create Themselves : (Account Belong To Installer)
Distributor can assist in managing the installer account	Installer need manage it themselves
Distributor can check all the power plants created by the installer	Installer needs to authorize distributor the power plants that installer created in order for distributor to check the plants







Sign up



⊕ English ∨		🏶 English 🗸	Change language
	E-mail ☑ E-mail ☑ Password > Please slide right to verify	E-mail Username □ E-mail → Password > Please slide right to verify	Email Password Slide To Verify
	Forgot your password? Register	Forgot your password?	Forget & Change password
-		Register	Register new account

Create account



TSUN	Registered Enterprise		Already have an account?Log In	🌐 English 🗸
	1 Fill in E-mail	2 Perfect Account Information 3 Perfect Enterprise Information 4 Registered Notice: If your enterprise has been registered in the system, you do not need to register again. Please contact the administrator of your enterprise to add you as an enterprise employee in the system.		
		E-mail Please slide right to verify Verification Code Verification Code Send Lave read and acreed (T8(c)) (Privacy		
		Strategy) Next		





1 Fill in E-mail	2 Perfect Account Information 3 Perfect Enterprise Information 4 Registered
	Notice: If your enterprise has been registered in the system, you do not need to register again. Please contact the administrator of your enterprise to add you as an enterprise employee in the system.
	* E-mail E-mail >> Please slide right to verify
	Verification Code Verification Code Send
	I have read and agreed 《T&Cs》 《Privacy Strategy》 Next

Fill in the base info and verification code





TSUN	Registered Enterprise			Already have an account?Log In 🛛 🌐 English 🗸
		Fill in E-mail	2 Perfect Account Informatic 3 Perfect Enterprise Informa 4 Registered	1
			* Name	
			Taro YX Username	
			TsunAsia * Password	
			Tsun1234 ©	
			* Please confirm	
			Next	
		F	ill the info and click next	





TSUN	Registered Enterprise		Already have an account?Log In	🌐 English 🗸
		Fill in E-mail — Perfect Account Informatic 3 Perfect Enterprise Informa 4 Registered		
		Enterprise Name: 简体中文 V Tsun Asia + Add]	
		Enterprise Area: China V	3	
		Next		
		Fill the info, select your company type and click next (Distrib	uter)	





TSUN	Registered Enterprise		Already have an account?Log In	🌐 English 🗸		
		Fill in E-mail Perfect Account Informatir Perfect Enterprise Informa A Registered Done and logged in				
	Registered is done, click "Done and Logged in"					

Business Group



7	sun	Business Group			Bus	iness Group ∨ Enter the busi	iness group na Q	+ Create Employee
MOF	RE SAFETY MORE POWER Management	+ Create Business Group	Employee Site Distribution				/	
\$	Lenterprise Information	TSun Asia	Employee Name	Role	Username	E-mail	Phone Number	Operation
	Business Group		TSUN_1694658876	Super admin	taro_cao	taro.cao@tsun-ess.com		
	Role Management							
	Contract Management							
\cap								
?								
文 _A								
2							Total 1 <	1 > 50 / page ∨

This is your Business Group You can add/ Create Employee

Create Employee



Create Employee		Cancel
	E-mail	
* Employee Name	* E-mail	
Taro	taro.cao@tsun-ess.com	
Username	* Password	
Taro1	TSUN1234	0
Business Group	* Role	
TSun Asia	✓ O&M management × Operating personn ×	
	Does the employee have an account number? Click here to search account	
	Fill in all the info	

Role management / Creating a Role



T	sún)	Role Management		Creating a Role
MORE	SAFETY MORE POWER Management	Roles are used to control the menu and function permissions visible to employees. After setting, please	e assign roles in [Site group] Create New Employee and Edit Employee.	
	Enterprise Information	Name	Describtion	Operation
4	Business Group	Super admin	An enterprise can only have one super administrator with all function permissions	Ø
	B Role Management	Asset management personnel	This role is suitable for managers in charge of site asset management	Ø
	Contract Management \vee	O&M management personnel	This role is suitable for the management personnel in charge of site operation and maintenance of the enterprise	đ
		Operating personnel	This role is suitable for site monitor and dispatcher	Ø
		O&M Personnel	This role is suitable for on-site operation and maintenance personnel	Ø
		Installation personnel	This role is suitable for site installation personnel	Ø
		After-sales and technical support personnel	This role is suitable for after-sales service personnel who deal with equipment after-sales problems and data problems in the enterprise	Ð
		Equipment R&D personnel	This role is suitable for R&D and testing personnel who deal with equipment access and equipment operation and maintenance in the enterprise	Ø
		Equipment management personnel	This role is suitable for the core R&D personnel responsible for equipment access, equipment operation and maintenance management in the enterprise	Ø
Û				
?				
Ż _А				
2			Total 9 <	1 > 50 / page V

Here is all the default "Roles"

"Create a new Role" : Personalize some more roles with different authority"

Creating a Role



Creating a Role		Cancel Save
* Name	Describtion	
Please enter	Please enter	
Menu configuration Rights Profile		
Devices	Check Devic List Check Device Add Device to Delete Device in Edit Device in the Device remote in Site Detail Site Site Site control	e Device firmware upgrade
Alerts	Check Alert List Check Alert Delete Alert Alert Notification Details Settings	
Log	Check log list	
Enterprise	Check Enterprise Edit Enterprise Info Info	
Business Group	Check Business Create Business Edit Business Delete Business Groups Group Group Group	
Role	View Creating a Role Edit Role Delete Role	
Employee	View Employees Create Employee Edit Employee Delete Employee	
Contract	Check contract Add Contract Edit Contract Cancel the Contract list	

Check $\sqrt{}$ the rights as you need. The "Check Business Groups" must be select

Create Business Group



T	sún r	Business Group	1		E	Business Group 🗸 👘 Enter the busin	ess group na Q	+ Create Employee
More	SAFETY MORE POWER Management	+ Create Business Group	Employee Site Distribution	1				
	Enterprise Information	TSun Asia	Employee Name	Role	Username	E-mail	Phone Number	Operation
	Business Group		TSUN_1694658876	Super admin	taro_cao	taro.cao@tsun-ess.com	22	
	Role Management							
	🛃 Contract Management \land							
	Contract		AddBusin	ess Group	×			
	Contract Scheme		* Business G	roup:				
			Tsun Braz					
				•				
				Ca	ncel			
0								
.ц (?)								
Ż _A								
							Total 1	1 50 / page ∨
		P						
		Cre	eate Busine • Create	ss Group : your compa	ny Departr	nent		

Edit / Manage Business Group



TSUN		Business Group				Business Group ∨ Enter th	e business group na Q	+ Create Employee
MORE SAFETY MORE POWER Management		+ Create Business Group	Employee Site Distribution					
	Enterprise Information	▼ TSun Asia	Employee Name	Role	Username	E-mail	Phone Number	Operation
	Business Group	 Tsun brazil Installer 1 	TSUN_1694658876	Super admin	taro_cao	taro.cao@tsun-ess.col	n	
	Role Management	 Installer 1 Installer 2 						
	Contract Management							
	Contract							
	Contract Scheme							

TSUN		Business Group				Business Group 🗸	Enter the business group na	Q + Create Employee
MOR	Management	+ Create Business Group	Employee Site Distribution	1				
R	1 Enterprise Information	▼ TSun Asia	Employee Name	Role	Username	E-mail	Phone Numbe	er Operation
	Business Group	 Tsun brazil salos 1 						
	A Role Management	after-sales						
	Contract Management	 Installer 1 						
	Contract	sales						
	Contract Scheme	 Installer 2 						
		tech team						



7	sun	Logger At present, only the "Logger" is supported for w	arehousing. After the warehousing device is powered on and the communication is normal, it can mo	onitor the data of the Logger and its sub-device through the "Monitor" function. $ imes$	+ Add Warehousing
MORI	Device O&M	Please enter Logger Please enter the devi	Please select a devic V Reset Search		2
	💻 Device Management 🛛 🔺	Logger SN Device Model	Device attributes	Warehousing time	Operati on
*	Logger				
	Monitor	1			
	Log				
			No Data		
Q					
⑦ 文					
					Total 0 < 1 > 50 / page ∨

Device O&M -----> Add Warehousing



TSUN		Logger At present, only the "Logger" is supported for w	arehousing. After the warehousing device is powered on and the communication is normal, it c	an monitor the data of the Logger and its sub-device through the "Monitor" function. $ imes$	+ Add Warehousing
Device O&A	Л		Please select a devic V Reset Search		
🔳 🖀 Device Mar	nagement 🔨	Logger SN Device Model	Device attributes	Warehousing time 🔅 Warehousing party	Operati on
Logger	[]				
Monitor					
Log			Add Warehousing	×	
Ф Э ж			At present, only the "Logger" is supported for warehousing. After warehousing device is powered on and the communication is no monitor the data of the Logger and its sub-device through the " function. * Device List Bulk entry Please upload the file in Eacel format Select a File Download * Device attributes Please choose Cancel	r the: rmal, it can Monitor"	Total 0 1 50/page Y
			Download Templ	ate	



三文件 🗋 ピ 🛱 🖸	Ξ 文件 🕞 🕫 🖓 ♀ ♀ 🛛 <mark>开始</mark> 插入页面 公式 数据 审阅 视图 工具 会员专享 效率 智能工具箱 🔍 💮 🗋 分享								
f 🗅 🕹	宋体 ~ 1	$11 ~~ A^+ ~~ A^- ~~ = ~~$	ᆕ _ ← 壬 🗐 换行	常规 > 🕽 转	换 ▼ 2 行和列 >	E 🗗 🔁 🗸	☑填充丶 ↓ 排序丶 册 冻结	ī v	
格式刷 粘贴 🗸 🕒 🗸	B I ⊻ ☆ ⊞ • 🗳	<u>}</u> • <u></u> ▲• ⊘• = =	三 三 三 🗎 🖽 ⋳#・	羊 ~ % 辨 🔝	→00 丁工作表 →	条件格式▼ ↓ ▼	∑ 求和 🗸 🖓 筛选 🗸 🔍 查找	ž v	
K		К	К		И				
D19 ~	$\bigcirc f_X$								
A A	В	С	D	E	F	G	Н	I.	J
<pre>1 collector sn</pre>	device model								-
2 R17Exxxxxx									
3 R18Exxxxxx									
4 R19Exxxxxx									
5 R20Exxxxxx									
6 R21Exxxxxx									
7 R22Exxxxxx									
8 R23Exxxxxx									
9 R24Exxxxxx									
10 R25Exxxxxx									
11 R26Exxxxxx									
12 R27Exxxxxx									
13 R28Exxxxxx									
14 R29Exxxxxx									
15 R30Exxxxxx									
16 R31Exxxxxx									
17 R32Exxxxxx									
18 R33Exxxxxx									
19 R34Exxxxxx									
20 R35Exxxxxx									
21 R36Exxxxxx									
22 R37Exxxxxx									
23 R38Exxxxxx									
24	E •								
25									
26									
27									
28									
29									•
< < > > 1 +									► I
3 5								100% -	• + 23
				Fill the	list				

	Logger At present, only the "Logger" is supported for warehousing. Aft	er the warehousing device is powered on and the communication is normal, it can monitor the	e data of the Logger and its sub-device through the "Monitor" function. $ imes$	
	Please enter Logger Please enter the devi Please set	lect a devic V Reset Search		
ent 🔦	Logger SN Device Model	Device attributes	Warehousing time 🗘 Warehousing party	
		Add Warehousing	×	
		At present, only the "Logger" is supported for warehousing. After the warehousing device is powered on and the communication is normal, it can monitor the data of the Logger and its sub-device through the "Monitor" function. * Device List Bulk entry L.xlsx Select a File Download		
		* Device attributes Official shipment V		
		Cancel		



7	sun	Logger At present, only the "Logger" is supported for wa	rehousing. After the warehousing device is powered on and the communication is normal, it	can monitor the data of the Logger and its sub-device through the "Monitor" function. $ imes $	+ Add Warehousing
MO	RE SAFETY MORE POWER		Please select a devic V Reset Search		
	Device Management	Logger SN Device Model	Device attributes	Warehousing time	Operati on
	Logger				
	Monitor				
	Log		Add Warehousing	×	
			At present, only the "Logger" is supported for warehousing device is powered on and the communication is n monitor the data of the Logger and its sub-device through the function. * Device List Bulk entry 1.xlsx Select a File Download * Device attributes Official shipment Cancel	ter the formal, it can "Monitor"	
\cap					
0					
ŻĄ					
2					Total 0 < 1 > 50 / page V
		Upload the fi	le> select Offical Shi	ppment> Click "Sure"	





Installer Duty

- 1. Create you own account if need
- 2. Help End-User to create plant
 - 3. Share the authority
- 4. Feedback and share the plant info if there is problem

Contract Mangment



7	sun	Contract	Contract Sch V Please enter Contract Scheme 🔍 🕂 Create a	new contract
MOR	Management	Receiver type	2	
(*)	B Enterprise Information	Contract Scheme Contract Initiator Contract Recipient	Receiver type Receiving site Op	peration
	Business Group			
	A Role Management			
	🛃 Contract Management 🔺	Select receiver type		
	Contract	1		
D Ø	Contract Scheme	a Enterprise Cancel Sure Sure Cancel Sure Cancel Ca		
			Total 0	50 / page V
404				rey page v

Create End-User Contract



Contract Initiator Tsun Asia Contract Recipient • Name • Name • Name • Username • Password Taro4 T1234567 Does the end user have an account? Click here Search Account	Cancel	ontract
Contract Recipient		Contract Initiator Tsun Asia
* Name * E-mail Taro taro.cao@tsun-ess.com * Username * Password Taro4 T1234567 Does the end user have an account? Click here Search Account		Contract Recipient
* Name * E-mail Taro taro.cao@tsun-ess.com * Username * Password Taro4 T1234567 © Does the end user have an account? Click here Search Account		E-mail
Taro taro.cao@tsun-ess.com * Username * Password Taro4 T1234567 Does the end user have an account? Click here Search Account	* E-mail	* Name
* Username * Password Taro4 T1234567 © Does the end user have an account? Click here Search Account	taro.cao@tsun-ess.com	Taro
Does the end user have an account? Click here Search Account	* Password	* Username
	end user have an account? Click here Search Account	
* Contract Scheme		* Contract Scheme
O&M site agreement	of the site, which can view edit, add, edit, delete, add, edit and delete the authorized site.	O&M site agreement





Installer Create End-user account	End-user Create Themselves
TSUN Monitoring and Management Portal	Talent smart APP
Installer can manage, edit and view the plant End-user only can View after Installer authorized the end-user	Installer must get the permitation from end- user to authorize both the Installer and Distributer
Need to authorize Distributer	



7	sún	Sites All		Enter site name Q PV+Srorage V 🕲	Create Site
MOR	SAFETY MORE POWER Monitor	Total(0) 通讯状态 V	报警状态 V 合 My Watchlist Advanced Filter >		
Ŕ	Tsun Asia 🗸 🗸	Site Name	≎ Com	Alerts	Operation
	🗠 Dashboard				
	🕒 Display				
	ど Sites]			
	Devices				
	🖄 Alerts 🗸 🗸				
	Service Application				
				NO Data	
Ļ					
?					
XA					
2					Total 0 < 1 > 50 / page V
			Monitoring> sites	-> Create Site	



Create Site					Cancel
Demo test 1 Tsun					
Please enter site address to search War J La 银河二路	银河三路	银河三路 銀河二路	Horner 酉 北路 銀河二路	BEIGUAN	10 pc.
mapbox	Sanba XIGUAN 胜利路	胜利路	西 記 北路 一一一一一一一一一一一一一一一一一一一一一一一一一一一一一一一一一一		Tuo River
Coordinates Longitude: 116 57 / 34,04 Region China / Anhui / Suzhou / Yongqiaoqu V	" Latitude: 33 * Address 2288	° 38	, 51.35 ,	* Time Zone (UTC+08:00) Beijing,Chongqing,Hong Kong,Urun	nqi V
		Fill in all t	he info		



Create Site		Cancel					
@mcpbex	XIGUAN 胜利路	路 宿州信美口腔医院 YONGQIAO 不 都 者 此利路 年 世利路 在 方服子 下 成 五 路 一 世利路 中山西街 宿州市第三医院 在 方服子 在 方服子 在 方服子 下 成 五 日 日 日 日 日 日 日 日 日 日 日 日 日					
* Coordinates Longitude: 116 ° 57 ′ 34.04	" Latitude: 33 " 38 ' 51.35						
* Region	* Address	* Time Zone					
China / Anhui / Suzhou / Yonggiaogu	2288	(UTC+08:00) Beijing,Chongaing,Hong Kong,Urumgi ✓					
_							
* System Type ①							
Solar+Grid U Solar+Grid+Consumption Solar+Grid+Consumption+Storage							
* Site Type ①							
Resident							
Production/On-grid Date	* Solar Capacity(kWp)	ModuleAzimuth(*)					
2023-09-28	6	Please enter					
ModuleTilt Angle(*)							
Please enter							
Related Party Type Contact Name	Contact Phone Number Contact	E-mail Name of Enterprise Operation					
Roof Owner V Taro	123123123 service	e01@tsun-ess.com Tsun Asia					
	+ Add a new line of data						
Fill in all the into and click Save							





Click Authorized sites to contract end-user





Fill in the info --- choose read site only agreement ---- click save



7	sún		Demo test 1 Tsun X									2	
MOR	SAFETY MORE POWER		Sites All Y 3E 88		Enter site name	Q	PV+Srorag	~ @	4	C Close	× 1	Create	Site
	Monitor		Tarries Without V Hermit V All Market Advanced Files										
e	Tsun Asia	\sim	Total(1) DEMARCE V TREACES V TJ My Watchist Advanced Filter V										
	Dashboard		Site Name 🗘 Com Alerts								Ope	ration	
	Display		Demo test 1 Tsun 🤤								ជ	Ø	Û
	💾 Sites												
	Devices												
	Alerts	~											
	Service Application	~											
Q													
0													
ŻĄ													
									То	tal 1		50 / page	V
										22999 (664)			
	Click Plant												







Demo test 1 Tsun Edit Tags Monitor Dashboard Sub-site Devices Alerts Layout Settings	Close V Updated Time : -
Monitor Dashboard Sub-site Devices Alerts Layout Settings	
tsun Asia → △ Site info Authorizations	
Dashboard E Authotizations Ste Manager ()	
Display () Data Source	tion Pastrictions
D Offset	
世 Devices	
Service Application X	
Contract Scheme	
Contract Schemer Read site only agreement V	
Cancel Sure	
E.	
Click here to authorize enterprise	
Choose "Read site only agreement"> Click save	



-	sin	Demo test 1 Tsun ×		Autorintics was deal						
MOR	LE SAFETY MORE POWER	Demo test 1 Tsun 😤 🤇	Edit Tags	Authonization succeeded	ជំ 🖸 Close 🗸					
	Monitor	Dashboard Sub-site De	evices Alerts Layout Settings		Updated Time :					
-	Tsun Asia 🗸 🗸	∆ Site info	Authorizations							
	🖉 Dashboard	Authorizations								
	🔳 Display	🕒 Data Source	Site Manager ()							
	Sites	Offset	Tsun Asia		Site Authorization Restrictions					
	Devices	& Planned Production	Enterprise		Currently, the authorization limit is not enabled. Enterprises can view the site data and operation status through the device library.					
	🚊 Alerts 🗸 🗸									
	Service Application		Authorized End User	+ Authorize to End User	Authorized Enterprise + Authorize Enterprises					
			● YX ● Contract Scheme:只读场站协议	8	fsuness Co., Ltd Contract Scheme: 只读场站协议					
Q										
(?) +										
X _A										
2										
	shows succeeded and there is enterprise under the list Done									





Rest settings please follow "Talent Smart Usermanual"





<u>TSUNESS Co., Ltd</u> <u>Website: www.tsun-ess.com</u> <u>Address:Building 3, No.2266, Xiangcheng District, Suzhou City, Jiangsu Province, China</u>